




like a PRO

www.levelit.eu





										CALCULATE											
A																					
	89													-	_						
	67	50									-	\leq	pie	eces	/m ²		>				
	53	40	32									ļ		\rightarrow		в					
30	67	50	40	44																	
33	61	45	36	40	37						A (600	:m)	×В	(60)cm		11	piec	esi	l
40	50	38	30	25	31	25															
50	40	30	24	27	24	20	16														
60	33	25	20	22	19	17	13	11													
	33	25	20	21	19	17	12	10	9												
90	30	22	18	15	15	15	11	9	8	7											
100	33	25	20	15	15	15	12	10	9	8	8										
120	28	21	17	15	15	15	10	8	7	6	7	6									
150	27	20	16	15	15	15	10	8	8	6	6	5	5								
180	26	20	16	13	14	12	9	8	7	9	6	5	5	4							
200	27	20	16	14	14	12	9	8	7	6	6	5	4	4	4						
240	25	19	15	13	13	11	9	7	7	6	5	5	4	4	4	3		_			
300	37	25	19	15	13	10	9	8	7	5	5	4	4	3	3	3	3				
				30				60		90	100	120	150	180	200	240	300	B			

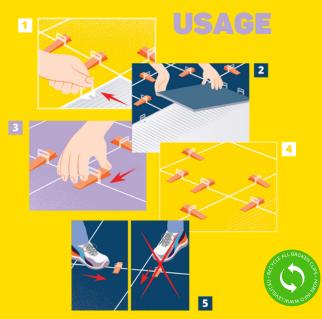

- 1. After applying the tile adhesive:
 - De clips onder de tegel schuiven.
 - According to the size of the tile, one or more clips per side.
 - Tapping the tile.
- 2. Place the next tile.

© This flyer is copyrighted - patent pending

- 3. Slide the wedge into the opening of the clip.*.
- 4. Allow the tile adhesive to fully cure.

5. Break the top part of the clips with your shoe in the direction of the joint.

^{*} the special pliers can be used to facilitate the insertion of the wedge into the clip when installing your floor.